


Bambu Lab X1E Combo 3D Printer

Quick Start

Please review the entire guide before operating the printer.

- * Safety Notice: Do not connect to power until assembly is complete.

PF001-E

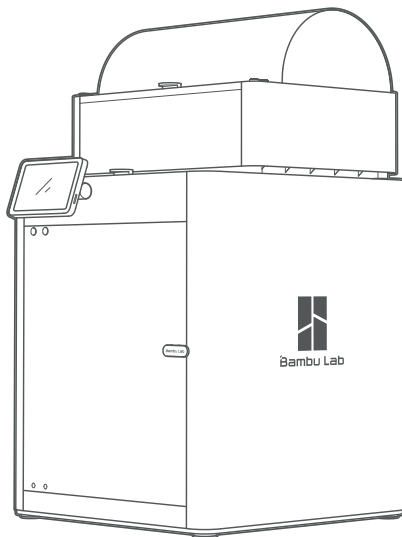




Bambu Lab Wiki
<https://wiki.bambulab.com>


*Warning:

- When operating the AMS, we recommend using Bambu Filament, which has been thoroughly tested to work with the AMS.
- **Please make sure to avoid using soft materials like TPU or damp PVA, as they can get stuck in the AMS.**
- AMS supports spool width of 50 mm - 68 mm. We highly recommend using filament with plastic spools that fit correctly inside the AMS. If you prefer to use cardboard spools, we strongly advise using a spool adapter to reduce the risk of slippage and debris getting left behind in the AMS.
- If you run into any issues with specific filaments, please let us know so that we can provide better advices to our community.



Component Introduction

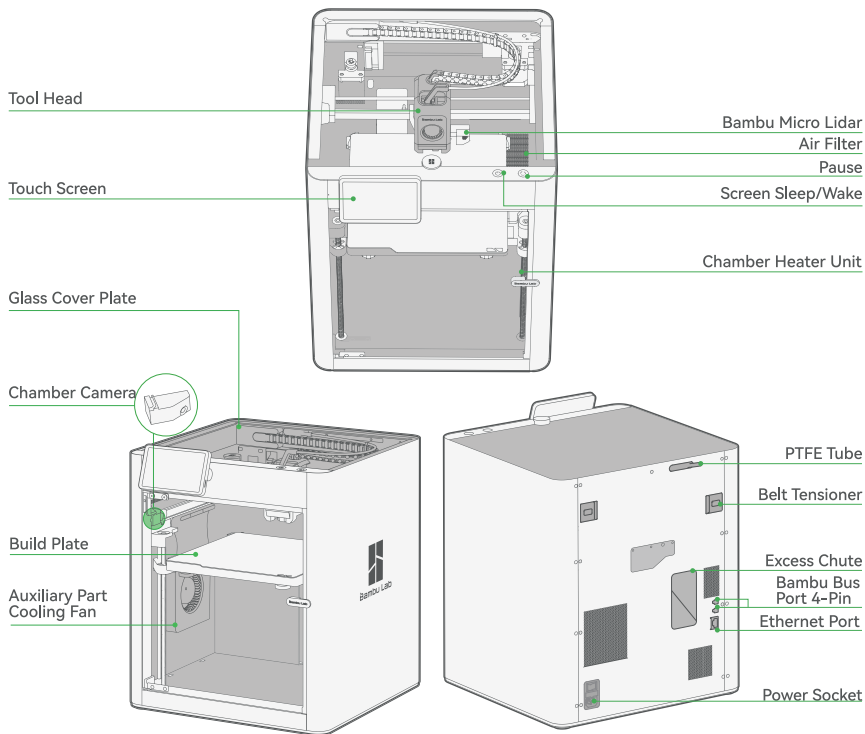


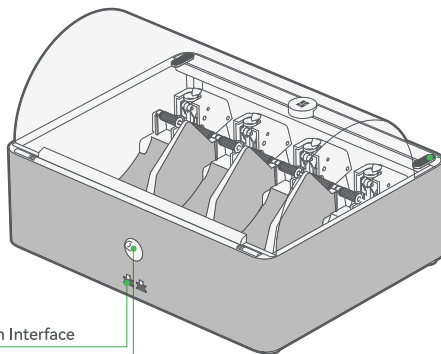

Buckle

Bambu Bus Cable 6-Pin Interface


Filament Outlet

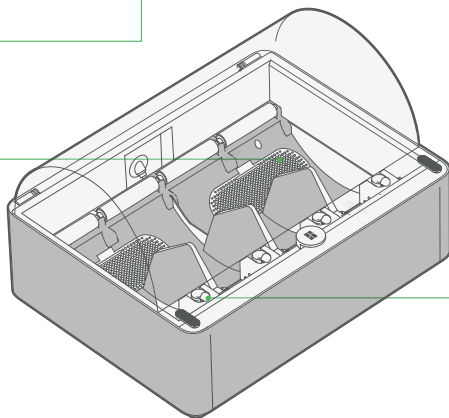

Desiccant

Filament Inlet

 
Accessory Specification



Touch Screen



Spool Holder

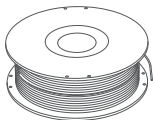


Filament (x3)



Complete Hot
End Assembly




Nozzle Wiping
Pad (x2)

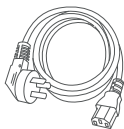

Power Cord



 Spare Filament
Cutter (x2)



Bambu Bus Cable-6Pin



 
Allen Key H1.5
Allen Key H2



Unclogging Pin
Tool



Flexible Build Plate
(Pre-installed on
build plate)



Bambu Bus Cable-4Pin




Bambu Scraper




Glue for Build Plate

AMS & Tool Head Unlock

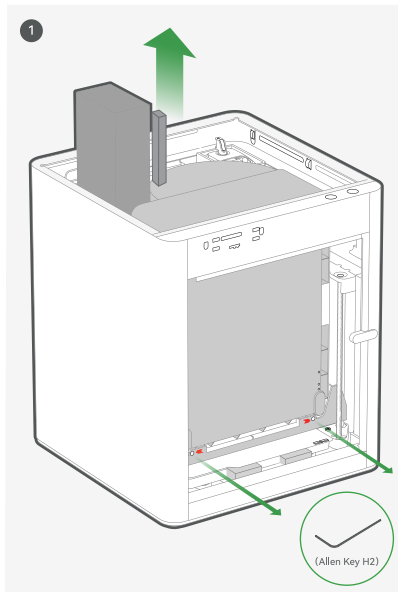


Take out the accessory box and filament switches.


*We recommend using the short end of the Allen Key to unlock the screws more easily.

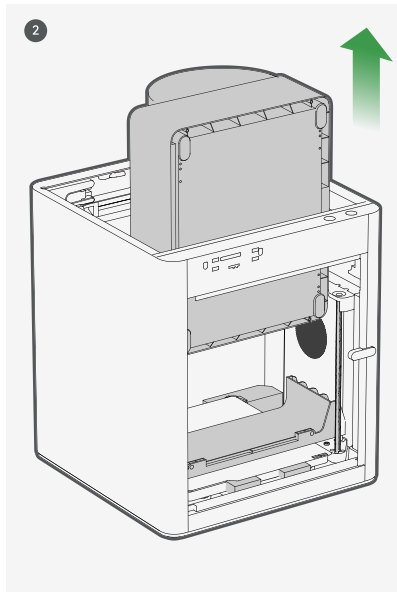


Take out the AMS by sliding it out through the top.

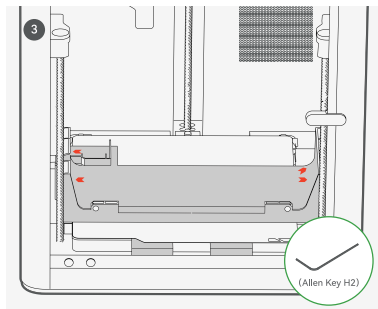


Remove the four screws as the arrows indicate.

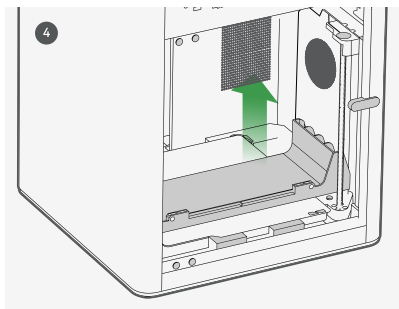

Take out the AMS cushioning.

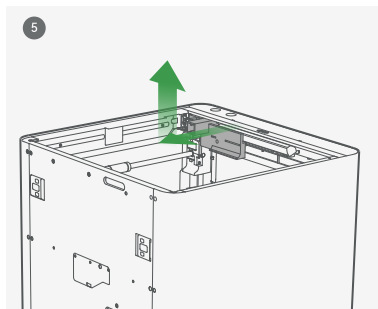

Take out the cushioning.

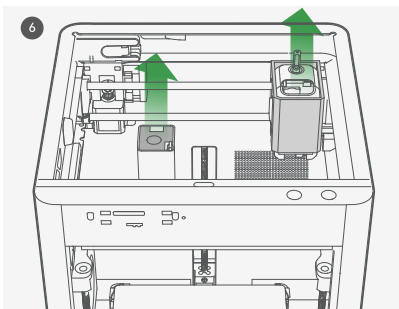

Remove the cardboard from the tool head.
Remove the foam from the excess chute.

AMS Assembly


*The cable-6pin can be plugged into either interface.

550mm PTFE Tube


370mm PTFE Tube

Bambu Bus Cable-6Pin


Bambu Bus Cable-4Pin

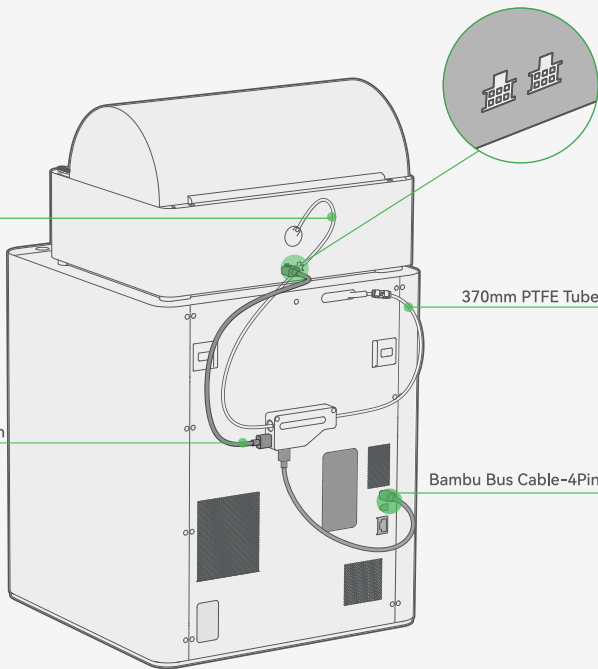

Spool Holder Assembly

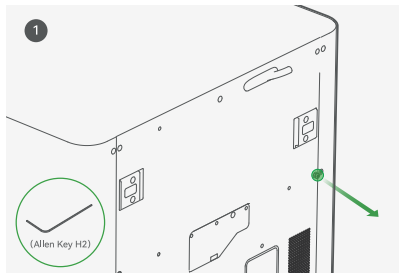


Remove the screw as pictured with an Allen Key H2.

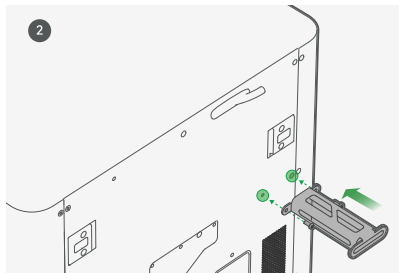


Secure the spool holder with two screws from the accessory box.


Hot Bed Unlock & Screen Installation

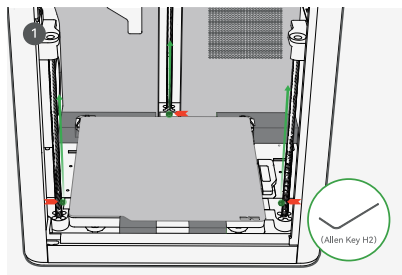


Remove the three screws with an Allen Key H2 to unlock the hot bed.

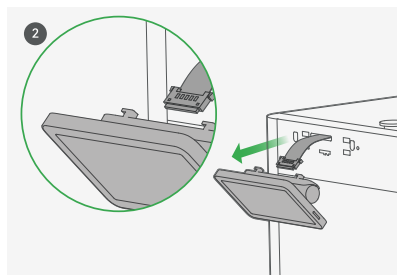

Pull the Flexible Printed Circuit (FPC) out about 50mm.

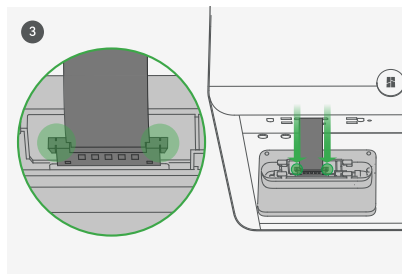


Insert the FPC into the port by pressing the terminal as pictured.

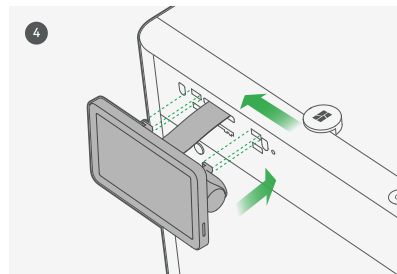


Insert the screen back to the slot on the printer, then lock it by pushing it to the left.


Connectivity

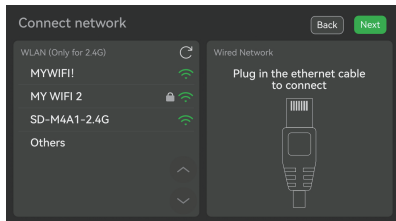


X1E now supports both Wi-Fi and Wired connection.

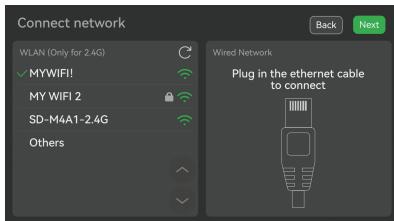

Wi-Fi connection: Select your preferred Wi-Fi to connect with Wi-Fi. The connected Wi-Fi network shows a checkmark on the left.

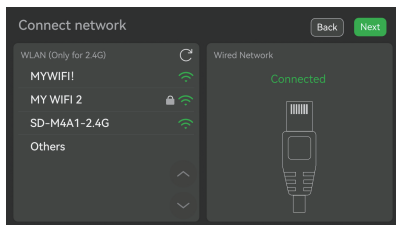


Ethernet connection: Plug-in the Ethernet cable to connect with Ethernet. The connected status shows on the screen as the diagram.

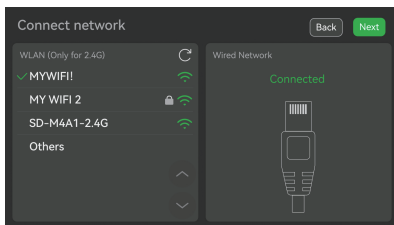


Both: You can connect with both Wi-Fi and Ethernet. (Ethernet connection is prioritized)

Network Kill Switch

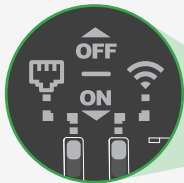

2. There are 2 separate switches to physically turn off the Ethernet and Wi-Fi.

1. Peel out the cover at the left upper side of the X1E frame.

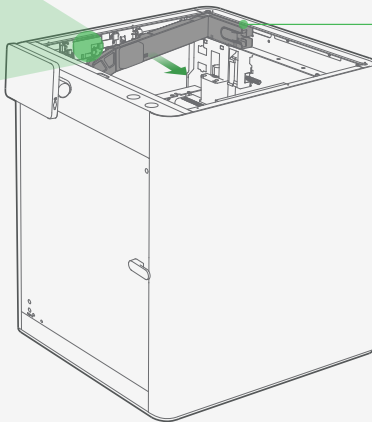


Printer Binding

1. Download the Bambu Handy App. Register and log in to your Bambu Lab account.
2. Connect the printer to power. Follow the instructions on the screen until getting to the page shown on the right side.





3. Use Bambu Handy to scan the QR code on the screen, and bind your printer with your Bambu Lab account.

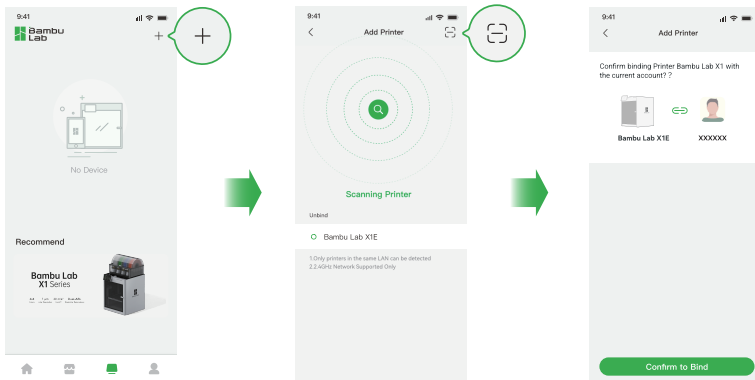


4. Follow the instructions on the screen to complete the initial calibration. It is normal to have vibration and noise during the calibration process.
DO NOT remove the protective foam from beneath the hot bed until after the initial calibration is complete.

First Print

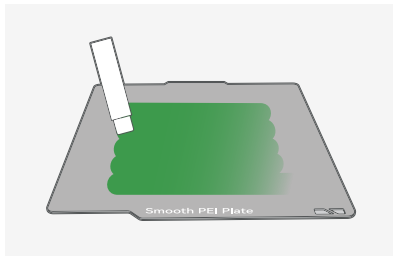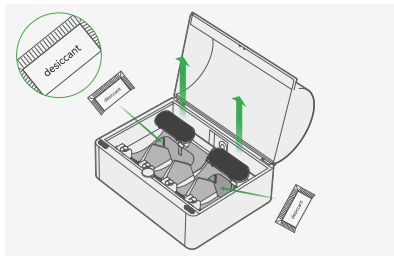


Apply a thin layer of glue on the build plate.

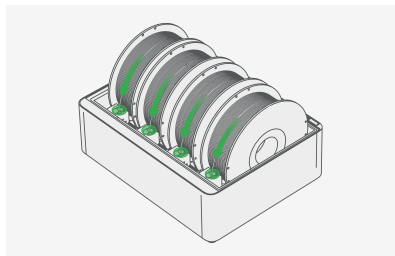

Place at least one spool of Bambu Filament into the AMS. Turn on the power to start the printer and the AMS. Insert the filament into the filament inlet. The filament will be automatically pre-loaded when detected.

*We recommend first printing a single-color model with the supplied Bambu PLA Basic.

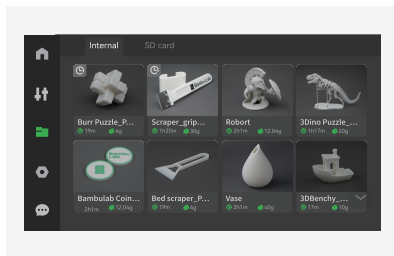


Press " " - "internal". Select a file to start the first print.

*We recommend using one of the pre-loaded files as a first test print.


Bambu Studio

Download Bambu Studio: <http://bambulab.com/download>

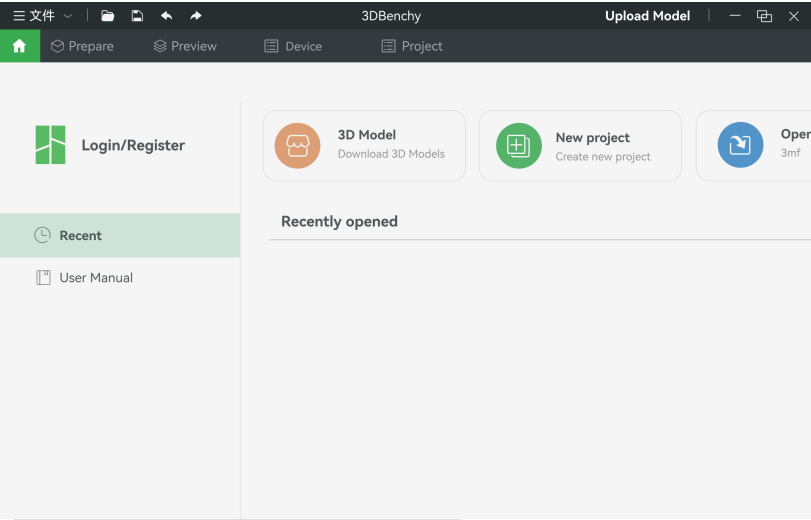

Log in to Bambu Studio with your Bambu Lab account, which is the same for the Bambu Online store. Create or open a project.


Bambu Studio

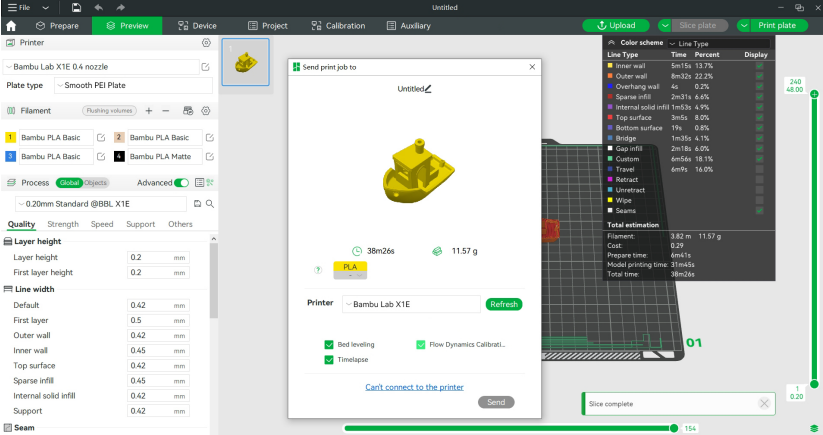

Slice the model, select your printer and send the model to print.

*We recommend performing bed leveling before each print and performing flow calibration after changing filament.

Bambu Studio

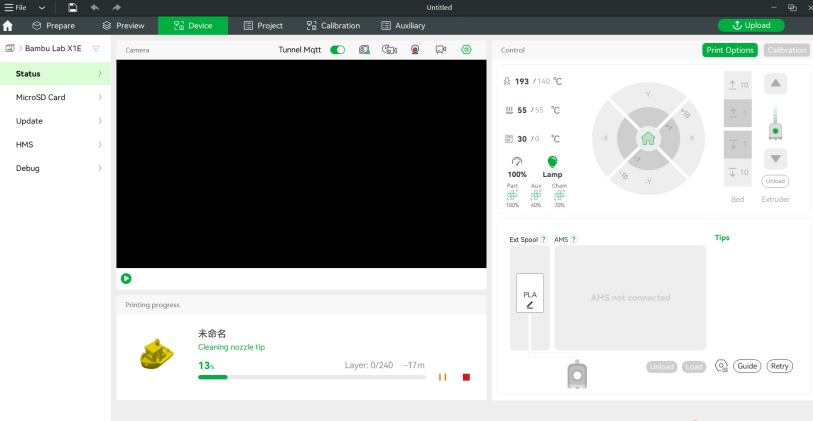

During printing, you can remotely monitor your print, or pause/stop printing on the "Device" interface.

*The live view can be seen only if a camera is mounted.



Bambu Studio
Bambu Handy

<https://bambulab.com/download>

Specification

Item		Specification
Printing Technology		X1E
Body	Build Volume(W×D×H)	256*256*256 mm ³
	Chassis	Steel
	Shell	Aluminum & Glass
Supported Filament	PLA, PETG, TPU, PVA, BVOH	Optimal
	ABS, ASA, PC, PA, PET	Superior
	Carbon/Glass Fiber Reinforced PLA, PETG, PA, PET, PC, ABS, ASA	Superior
	PPA-CF/GF, PPS, PPS-CF/GF	Ideal
Heating	Active Chamber Heating	Yes
	Maximum Chamber Control Temperature	60℃
Air Purification	Pre-filter Grade	G3
	HEPA Filter Grade	H12
	Activated Carbon Filter Type	Coconut Shell Granulated
	VOC Filtration	Optimal
	Particulate Matter Filtration	Yes
Network Control	Ethernet	Yes
	Wireless Network	Wi-Fi
	Network Kill Switch	Wi-Fi & Ethernet
	Removable Network Module	Yes
	802.1X Network Access Control	Yes
Cooling	Part Cooling Fan	Closed Loop Control
	Hot End Fan	Closed Loop Control
	Control Board Fan	Closed Loop Control
	Chamber Temperature Regulator Fan	Closed Loop Control
	Auxiliary Part Cooling Fan	Closed Loop Control
Hot bed	Build Plate	Flexible Steel Plate
	Build Plate Surface (Included)	Bambu Smooth PEI Plate
	Build Plate Surface (Optional)	Bambu High Temperature Plate, Bambu Textured PEI Plate, Bambu Cool Plate
	Max Build Plate Temperature	110℃@220V, 120℃@110V
Speed	Max Speed of Tool Head	500 mm/s
	Max Acceleration of Tool Head	20 m/s ²
	Max Hot End Flow	32 mm ³ /s @ABS(Model: 150*150mm single wall; Material: Bambu ABS; Temperature: 280℃)

Tool Head	Hot End	All-Metal
	Extruder Gears	Hardened Steel
	Nozzle	Hardened Steel
	Max Hot End Temperature	320 °C
	Nozzle Diameter (Included)	0.4 mm
	Nozzle Diameter (Optional)	0.2 mm, 0.6 mm, 0.8 mm
	Filament Cutter	Yes
Sensors	Filament Diameter	1.75 mm
	Bambu Micro Lidar	Yes
	Chamber Monitoring Camera	1920*1080 Included
	Door Sensor	Yes
	Filament Run Out Sensor	Yes
	Filament Odometry	Optional with AMS
Physical Dimensions	Power Loss Recover	Yes
	Dimensions	389*389*457mm
Electrical Requirements	Net Weight	16kg
	Voltage	100-240 VAC, 50/60 Hz
Electronics	Max Power	1400W@220V, 750W@110V
	Display	5-inch 1280*720 Touch Screen
	Storage	4GB EMMC and Micro SD Card Reader
	Control Interface	Touch Screen, APP, PC Application
	Motion Controller	Dual-Core Cortex M4
	Application Processor	Quad ARM A7 1.2 GHz
Software	Neural-Network Processing Unit	2 Tops
	Slicer	Bambu Studio Support third party slicers which export standard G-code such as SuperSlicer, PrusaSlicer and Cura, but certain advanced features may not be supported.
	Slicer Supported OS	MacOS, Windows
Wi-Fi	Frequency Range	2412 MHz ~ 2472 MHz (CE) 2412 Mhz ~ 2462 MHz (FCC) 2400 MHz ~ 2483.5 MHz (SRRC)
	Transmitter Power (EIRP)	≤ 21.5 dBm (FCC) ≤ 20 dBm (CE/SRRC)
	Protocol	IEEE 802.11 b/g/n
Ethernet	Socket	RJ45
	Speed	100 Mbps / Full Duplex
Laser (CLASS 1)	Wavelength	850 nm、850 nm
	Maximum Output of Laser Radiation	< 0.778 mW

Customer Support


Please visit the Bambu Lab Wiki for more setup and maintenance tutorials.

<https://wiki.bambulab.com/en/home>




If you need support, please try either of the two approaches:

Approach 1: Create a support ticket on the Official Website

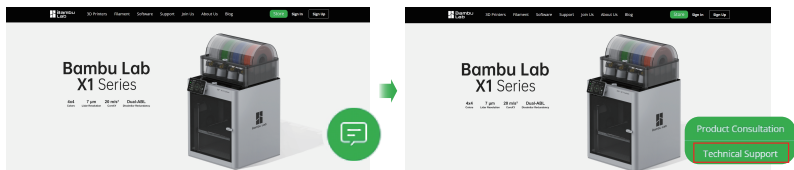

Approach 2: Create a support ticket on the Bambu Handy App

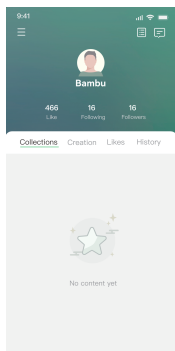



Bambu Lab

Enjoy!

www.bambulab.com